




The BUSY BARROW - Assembly Instructions

BARROW
COMPANY LLP

PARTS LIST

Main Frame Parts List.

- [A/B] Left/Right frame components
- [C] Crossbar assembly
- [D] Nose assembly
- [E] Wheel assembly
- Four 8mm x 12mm bolts

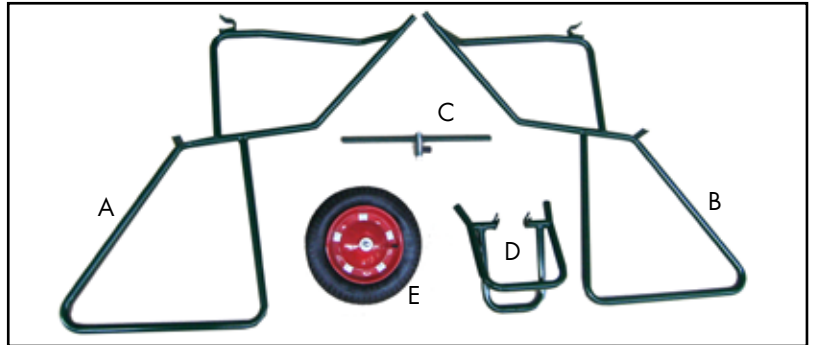

Tub assembly




- [F/G] side panel x 2
- [H/I] End panels x 2
- [J] Base x 1
- Sixteen 5mm x 10mm countersunk screws and nuts

ASSEMBLY INSTRUCTIONS FOR MAIN FRAME

STEP 1 Fit crossbar [C] to L/R hand side frames [A+B]. Ensure crossbar is the right way round with end marked "L" against the left hand frame, and ensure the locking bar is uppermost and facing towards the wheel, using four 8mm x 12mm bolts and washers bolts to be assembled from underside of crossbar.



STEP 2 attach nose [D] to L/R of frame by hand, then tap gently until joints are fully inserted as shown in 3.

STEP 4 assemble wheel [E] onto main frame and tighten accordingly.

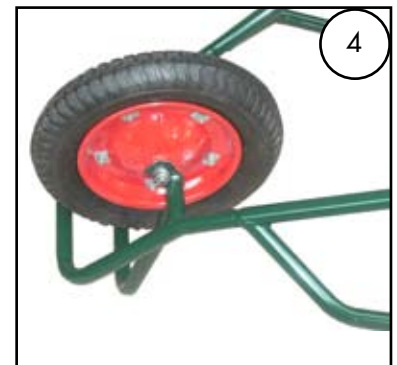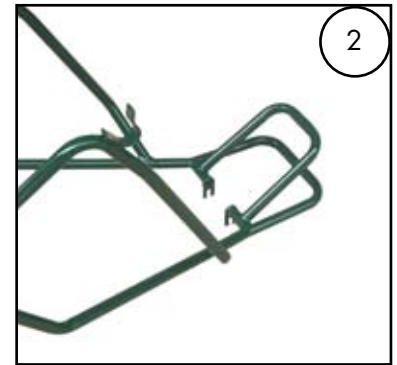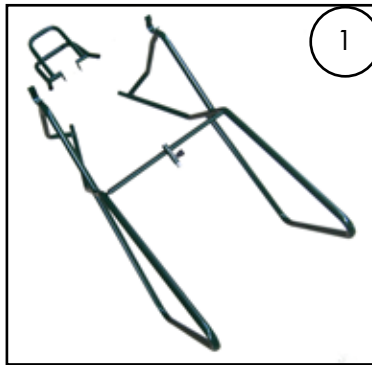

TUB ASSEMBLY

Fit end panel [H] to inside face of each side panel [F/G] as shown in step 6 below, ensuring nuts are on the outside of the tub as shown, repeat this for both ends then fit in the base [J] to complete assembly.

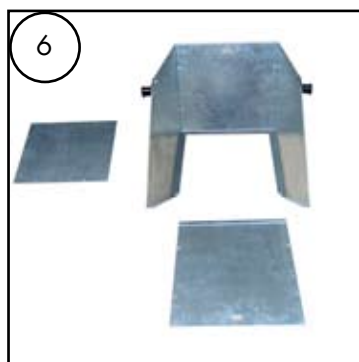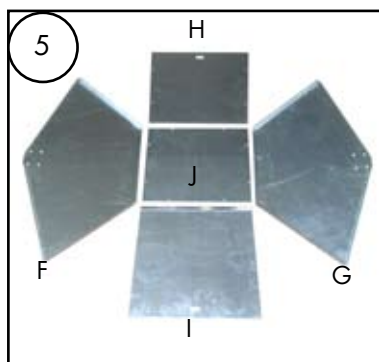



The BUSY BARROW - Health and Safety


BARROW
COMPANY LLP

Please Read This

Operating the BUSY BARROW - Health and Safety Information

Although BUSY BARROW places up to 45% less stress on your body, please ensure you always take care not to over fill the tub.

- Always work within your personal capabilities.
- BUSY BARROW will hold and tip much more than you can lift unassisted.
- With a little practice you can use the BUSY BARROW with safety and ease.
- Always follow good lifting practice i.e. bend your legs not your back.
- Please see video on our Website www.BusyBarrow.com for correct operating use if you are in any doubt.

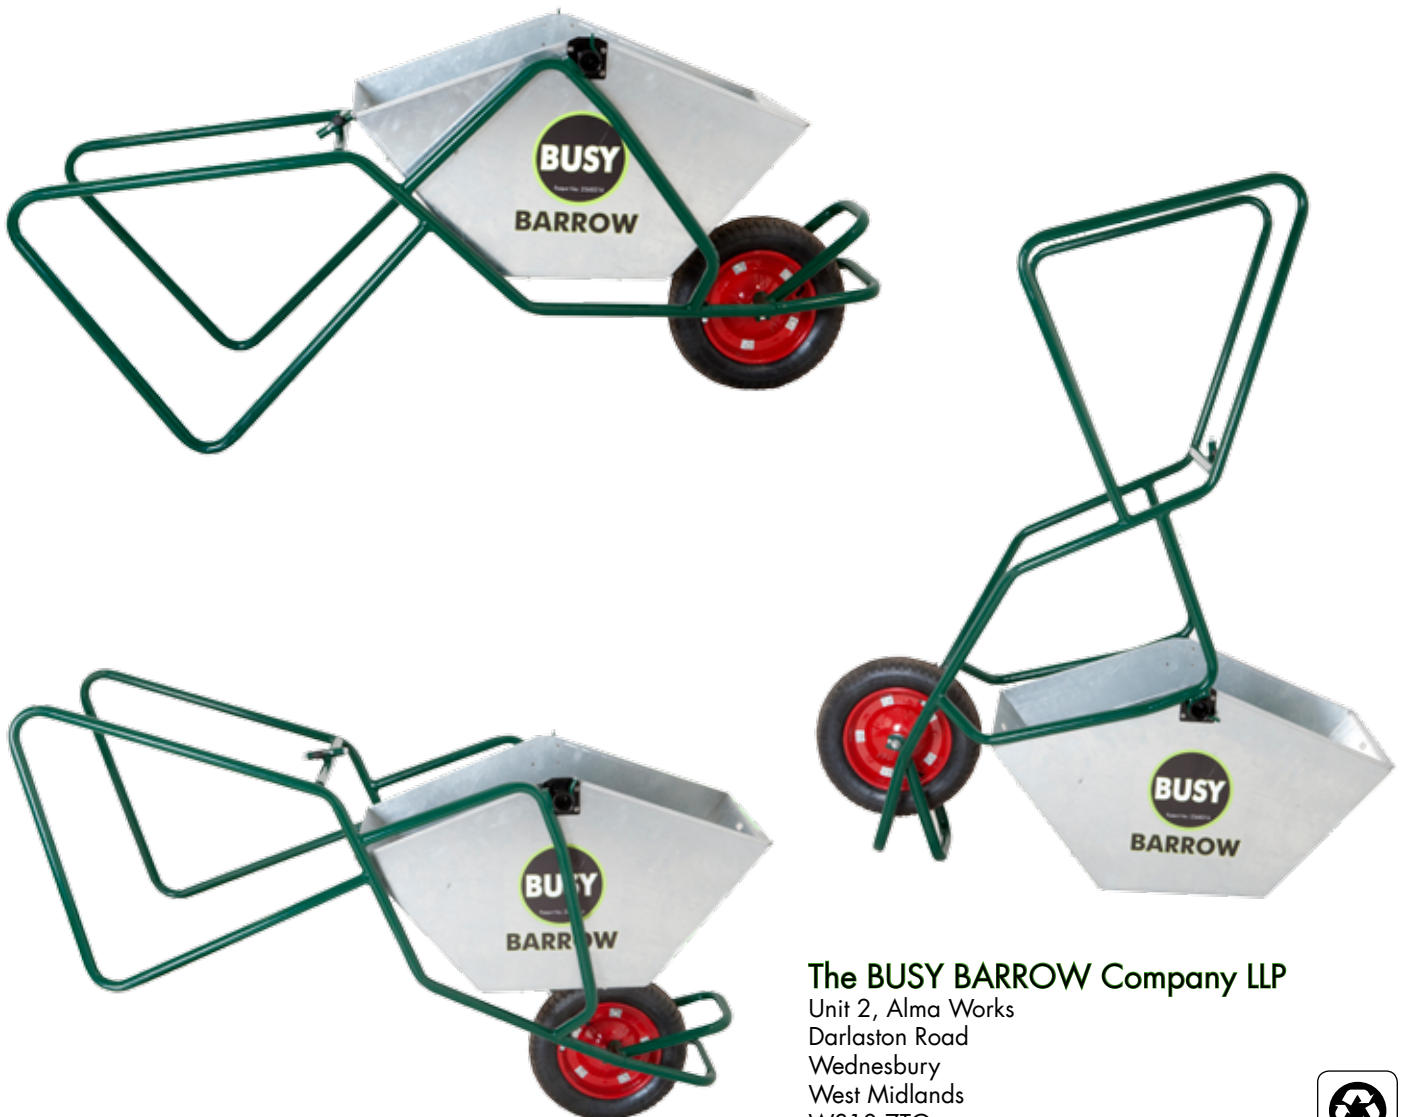

The BUSY BARROW Company LLP

Unit 2, Alma Works
Darlaston Road
Wednesbury
West Midlands
WS10 7TG
UK

